

# **STANDARD OPERATING PROCEDURE AND SAFETY GUIDE FOR SCORBOT - ER V**

**(Located in Rm. H -12 A Head Hall)**




**Prepared**

**August 3, 2010**

# Table of Contents

1. Scope.....	4
1.1 Objective.....	4
1.2 Regulations .....	4
2.Apparatus Overview and objective.....	4
2.1 Apparatus overview .....	4
3. Hazards and control evaluation.....	12
3.1 Possible fire event .....	12
3.2 Ventilation.....	13
3.3 Kinetic, thermal & accoustic.....	13
3.4 Electrical .....	13
3.5 General, physical & equipment concerns .....	14
3.6 Access .....	15
3.7 Training.....	15
3.8 Personal protective equipment.....	15
4. Operation.....	15
4.1 Qualified personnel.....	15
4.2 Experiment preparation.....	15
4.3 Lab instructions.....	17
4.4 Operating procedure.....	17
5. Inspection and maintenance.....	20
5.1 Operational & Periodic inspections .....	21
6. Typical test.....	22
Appendix A: SCORBOT - ER V plus User's Manual.....	23
Appendix B: Introduction to the SCORBOT - ER V .....	24
Appendix C: I/O Communication with the SCORBOT - ER V .....	25
Appendix D: SCORBOT overview .....	26
Appendix E: ATS Terminal command reference .....	27

## H -12 A, Head Hall floor plan

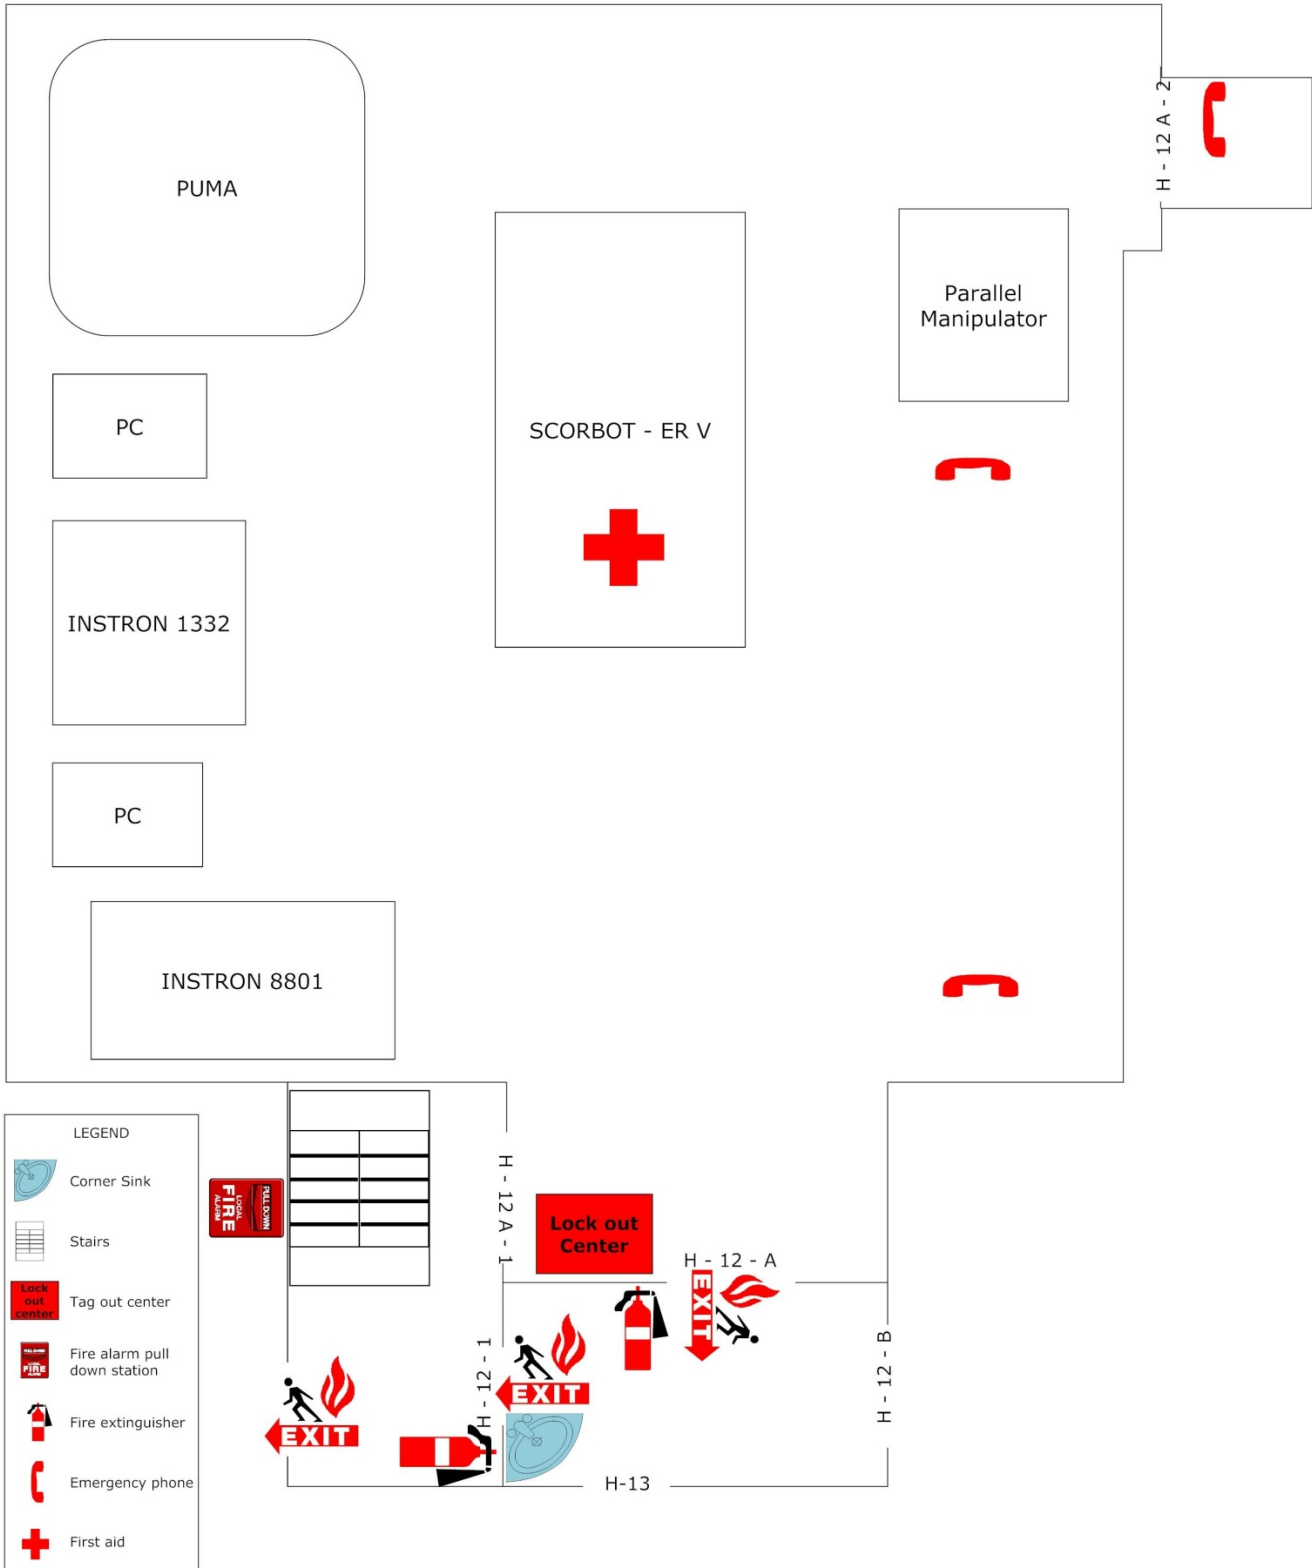

## 1. Scope

### *1.1 Objective*

This standard operating procedure is intended to provide operating instructions and safety information for the Department of Mechanical Engineering's SCORBOT - ER V Plus located in H - 12 A, in Head Hall. This document is intended as a guideline and supplement to proper training that must be provided by qualified personnel before the robot is operated. The aim of this document is to ensure that safe work practices have been developed for the robot experimental work. This SOP is primarily concerned with the robot's operating procedure, hazards involved with its operation and safety precautions that must be taken to avoid injuries.

### *1.2 Regulations*

This document has been developed in accordance with the Environmental Health and Safety Office of the University of New Brunswick.

## 2. Apparatus Overview and Objective

### *2.1 Apparatus overview*

The **arm** of SCORBOT - ER V Plus has 5 degrees of freedom (joints). The five joints of the arm are the **base, shoulder, elbow, pitch** and **roll**. The joints move independently when the **teach pendant** is put in joint mode and in Cartesian coordinates plane when the **teach pendant** is put in XYZ mode. Each joint has a **servo motor**. The end of the arm has a **two jaw servo motor controlled gripper** which opens and closes to drop or grip a wooden block and is controlled via **teach pendant** as well as **ATS (Advanced Terminal Software)**.

**ATS** is a terminal emulation program that provides a user interface to the **controller**. It also provides a means of configuring the controller and backing up the user's programs, positions and variables to a floppy, CD or hard drive. Please refer to Appendix "B" (Introduction to the SCORBOT - ER V, section 1.7) to see the list of available terminal commands. ATS uses **ACL (Advanced control language)** to communicate with the controller. Please refer to Appendix "A" (SCORBOT - ER V Plus User's Manual, Chapter 7) to see the details of programming with ACL.

The end of the arm has another joint known as **roll** that controls the rolling motion of gripper. The pitch and roll motion of gripper are mechanically independent. These two motions are controlled by two different servo motors through a differential-like arrangement of bevel gears.

The sixth degree of freedom is added to the SCORBOT as a linear motion below the base which is also controlled by the teach pendant and ATS. This greatly expands the robots reachable workspace.

The SCORBOT has a **controller** that supplies 12 VDC power to the robot. It has 16 digital inputs and outputs and has a 128 KB of battery backed up user RAM for storing positions, variables and programs. The controller has **EMERGENCY** and **MOTOR** switches.

Please refer to Appendix “A” (SCORBOT - ER V plus User’s Manual) to see the figured details and description of all the components of SCORBOT.

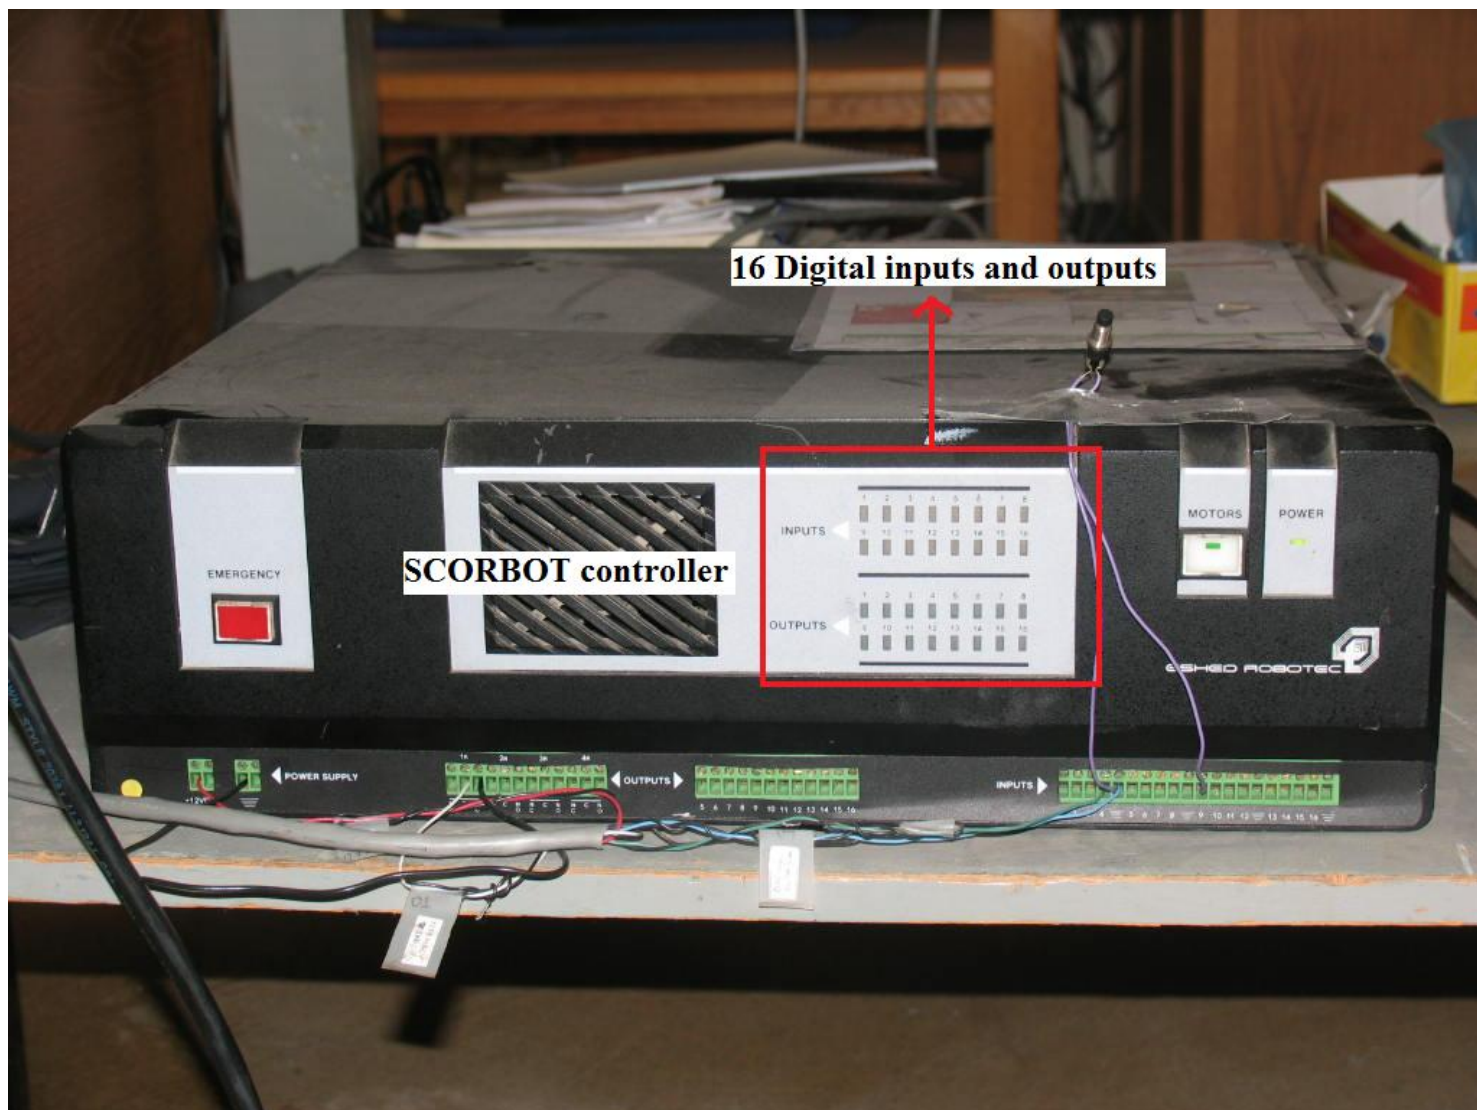


Figure 1: SCORBOT Controller



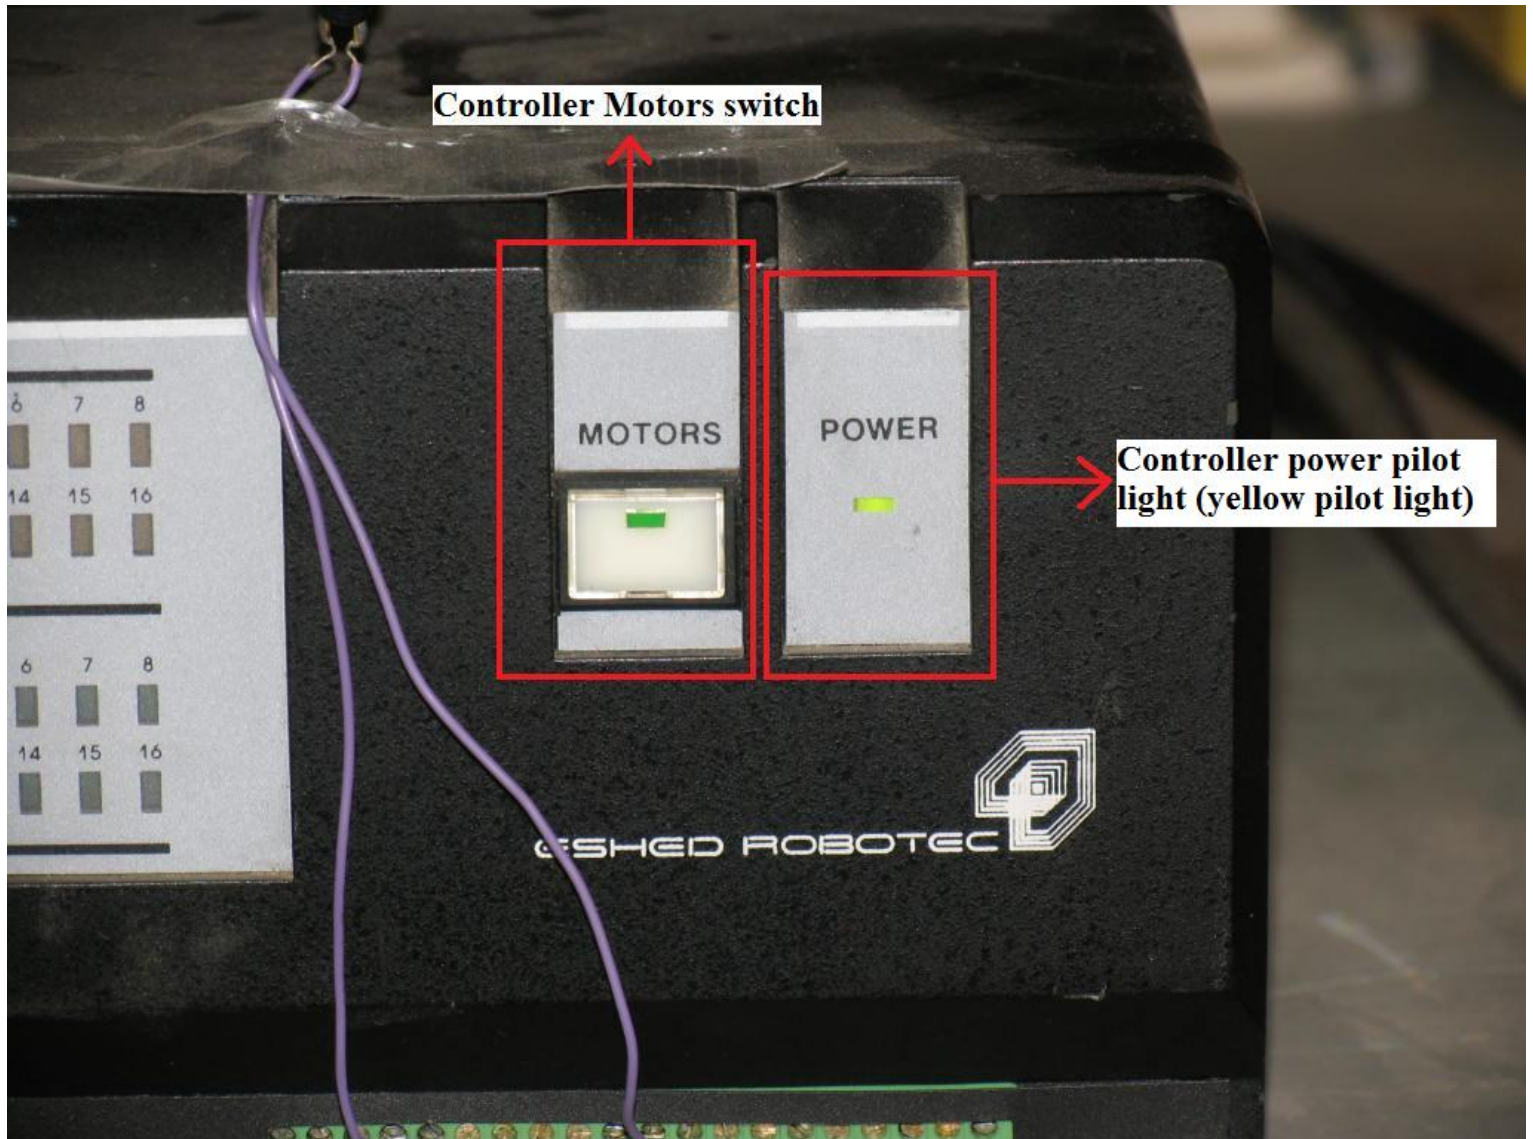


Figure 2: Controller power pilot light and motor switches

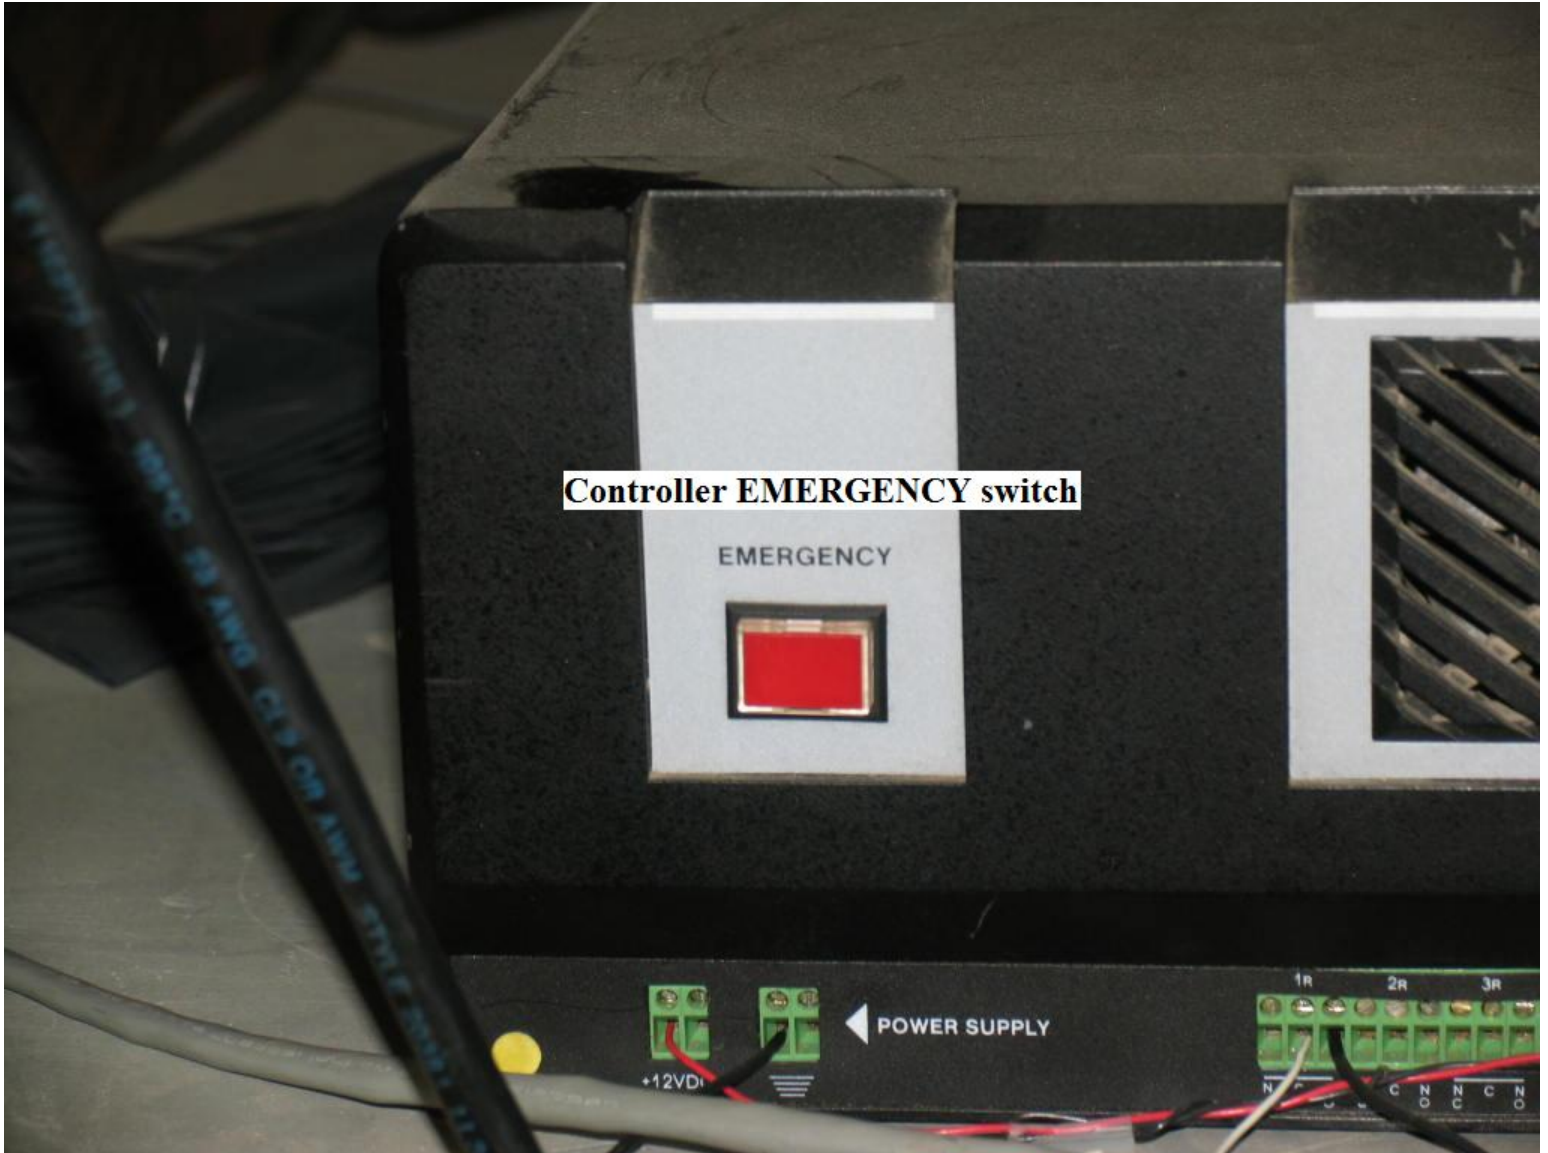


Figure 3: Controller EMERGENCY switch



SCORBOT teach pendant



Figure 4: SCORBOT teach pendant

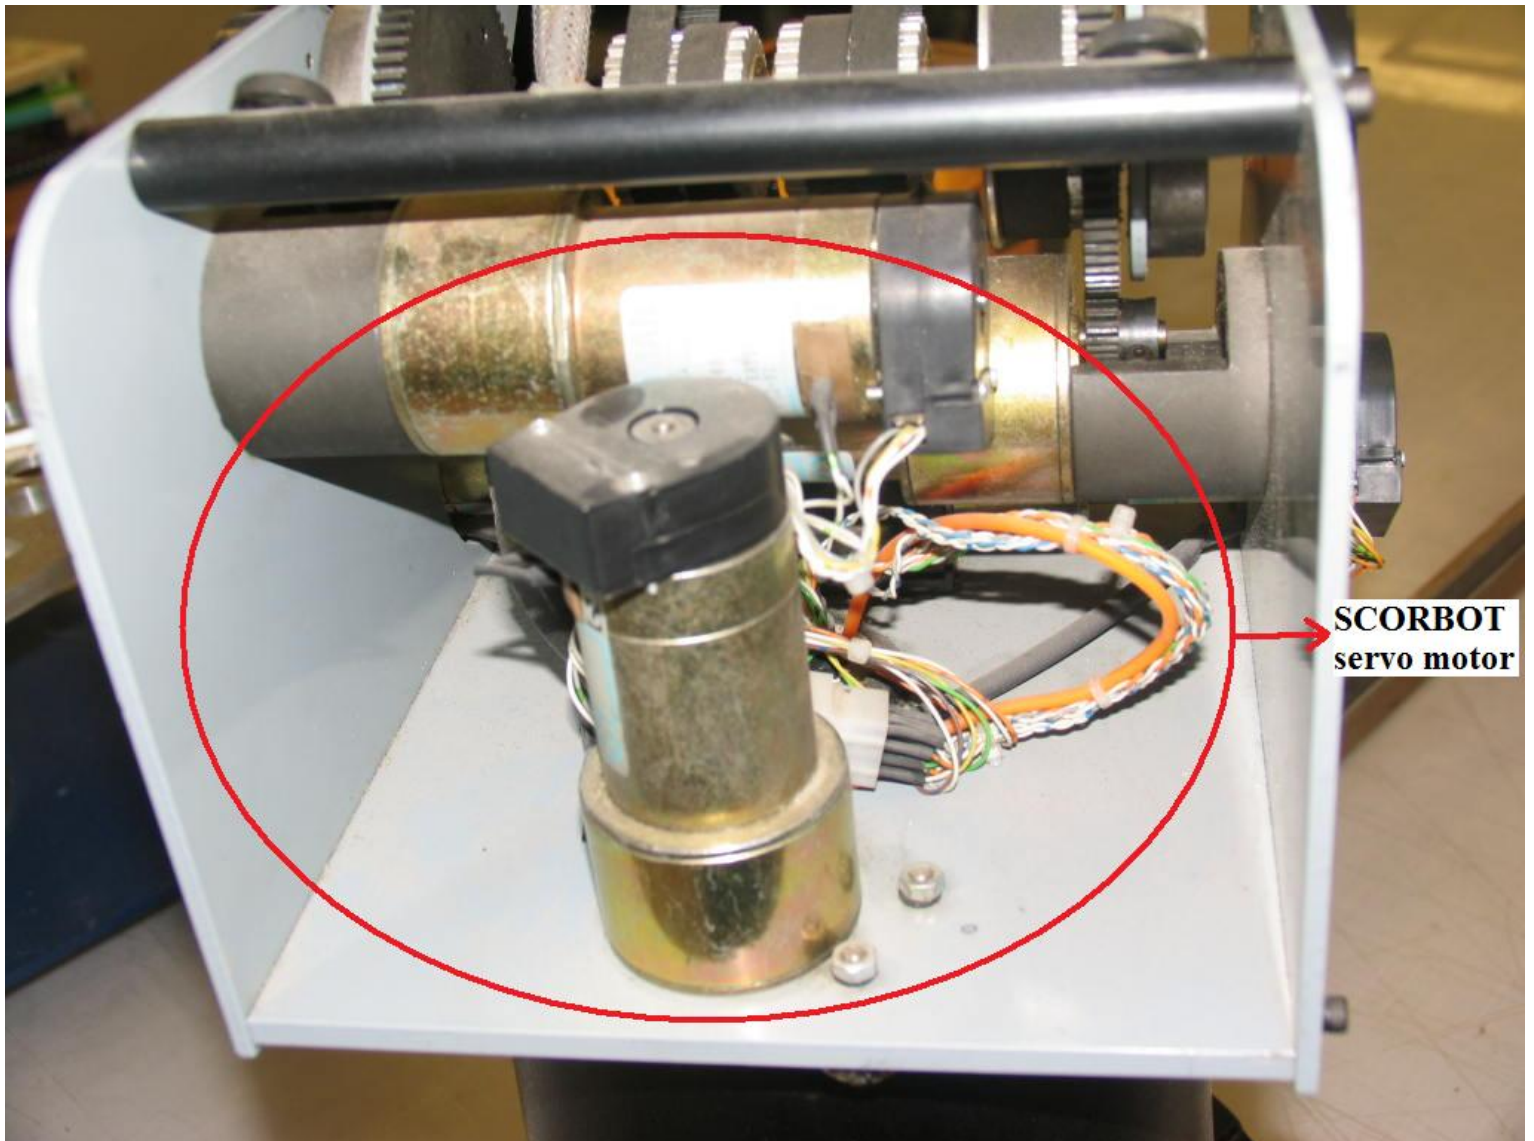


Figure 5: Servo motors controlling the joints motion

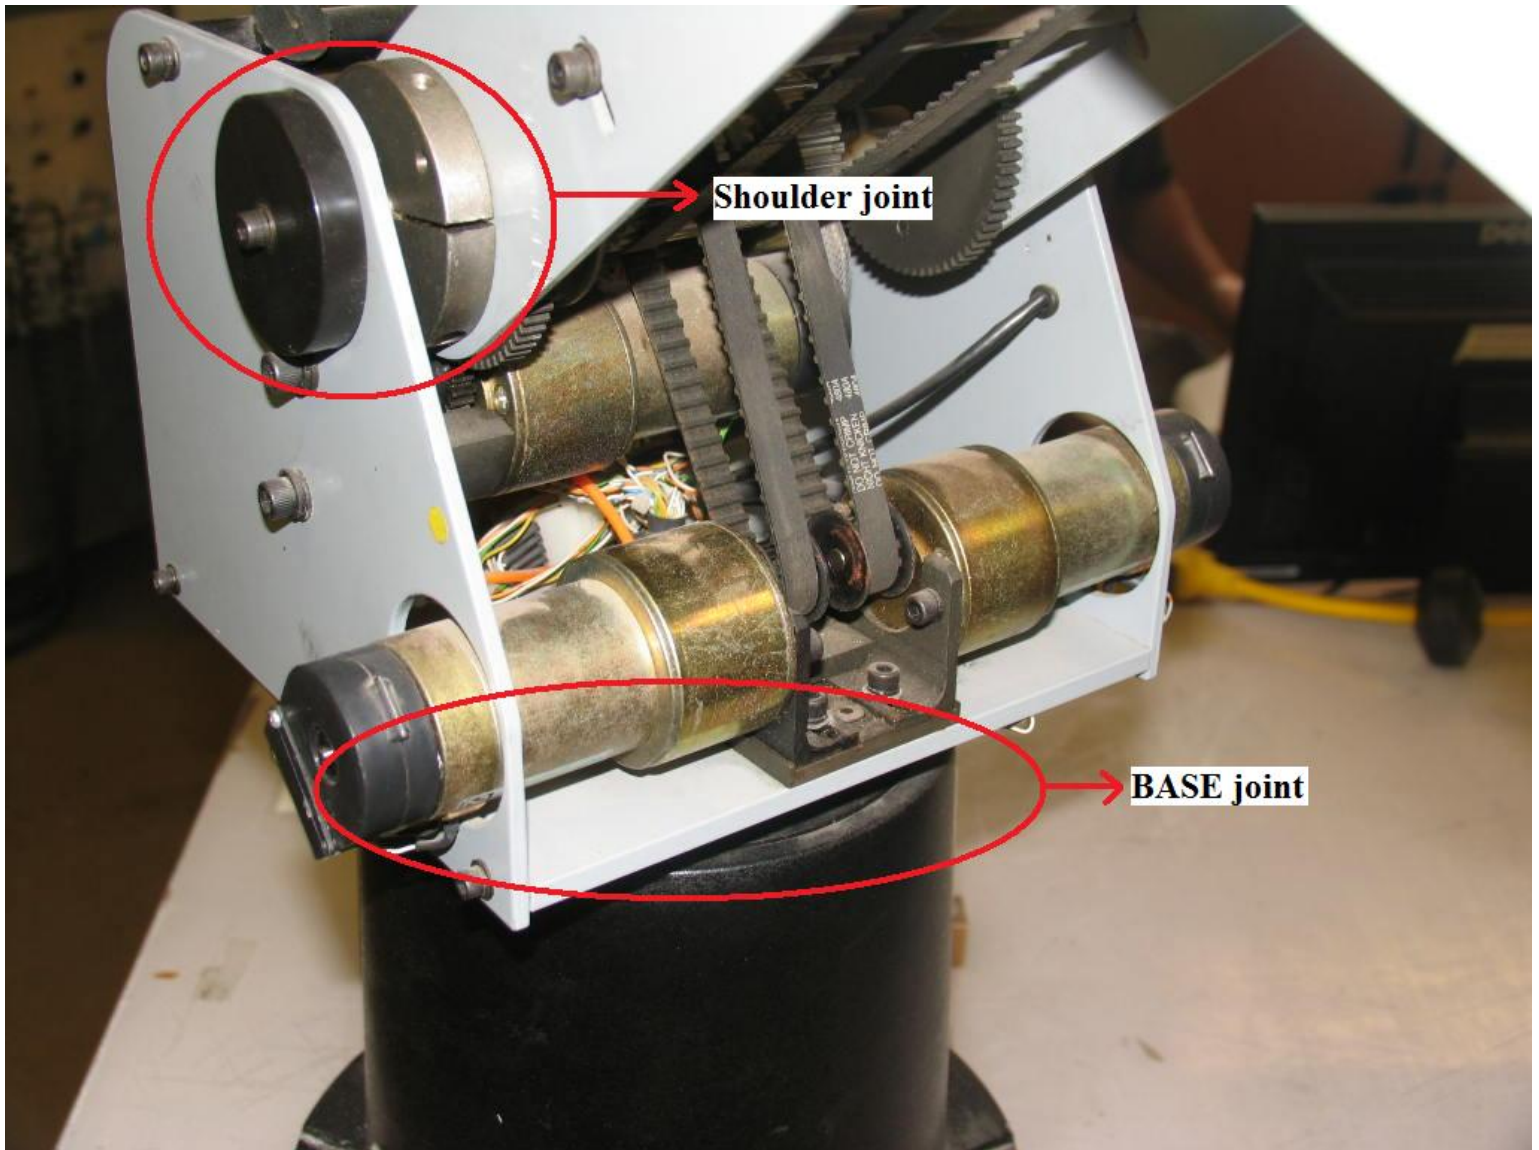


Figure 6: SCORBOT base and shoulder joints



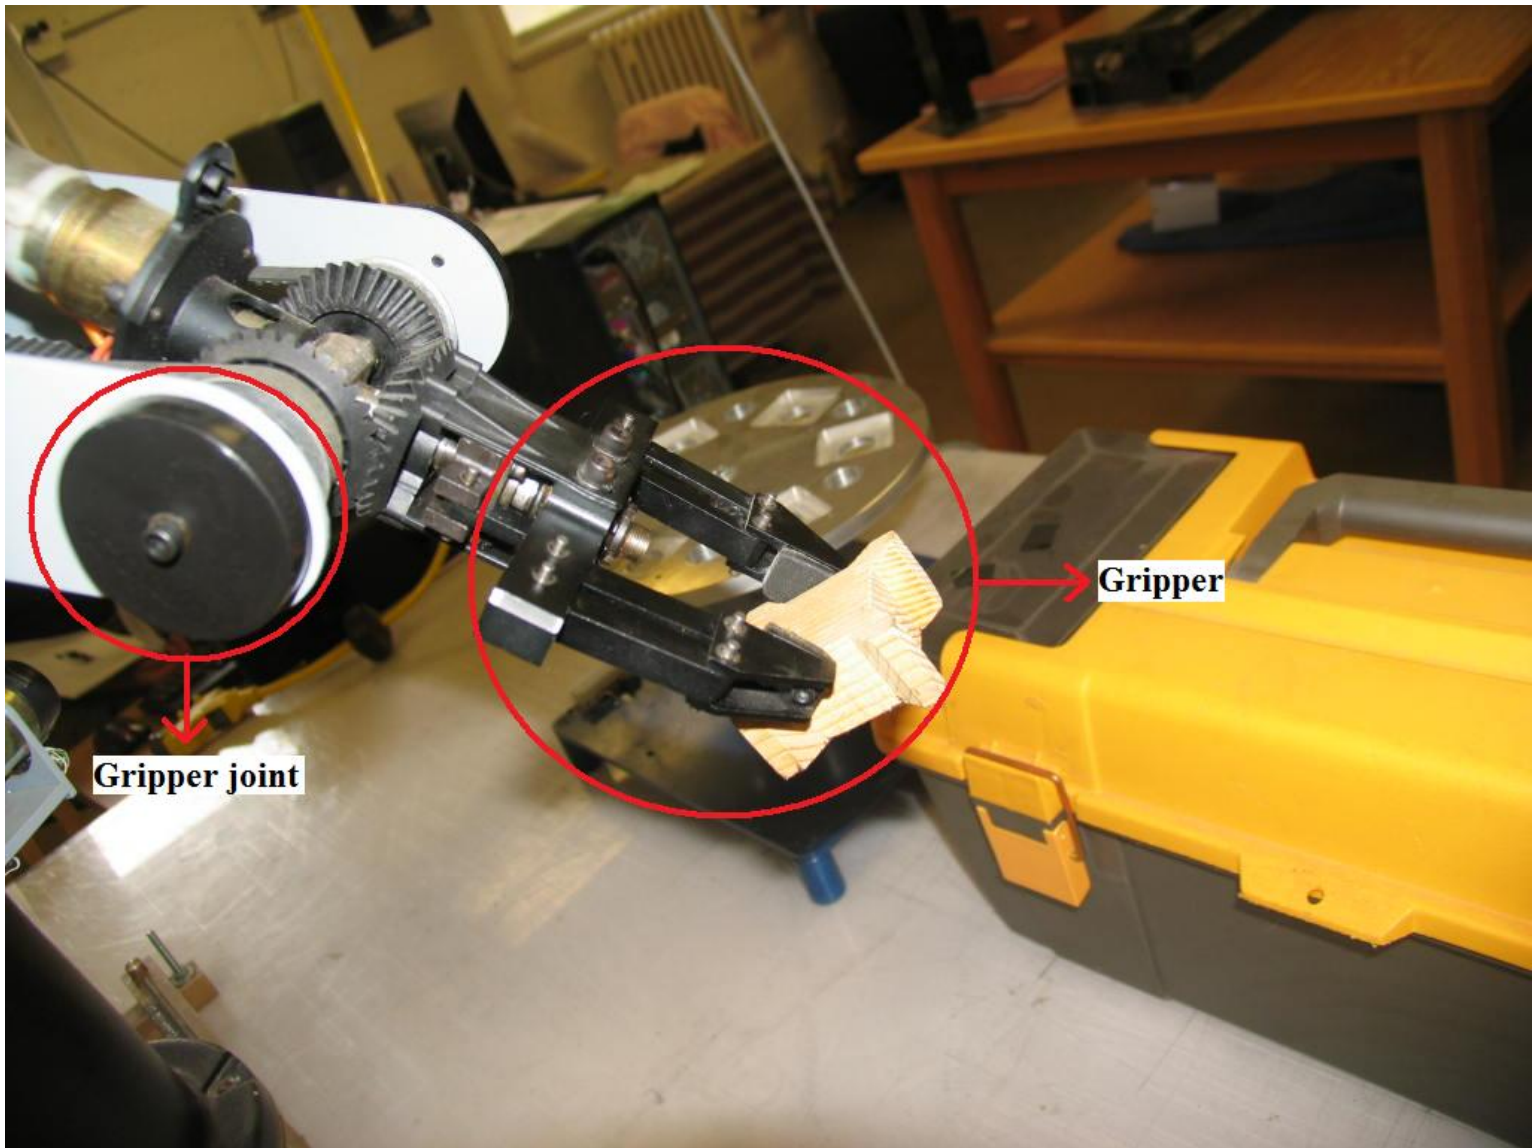


Figure 7: Gripper joint

The SCORBOT is also provided with a **Geneva wheel/indexing table**. Its rotating motion is controlled by the ATS. The test blocks are mounted on Geneva wheel and the SCORBOT/manipulator is assigned the task to pick and drop the test block to the Geneva wheel using teach pendant or ATS. Please refer to Appendix “C” (I/O Communication with the SCORBOT - ER V, Indexing table) to see the details and description of Geneva wheel operation.

The objective of the SCORBOT - ER V Plus is to familiarize students with the operation of the SCORBOT - ER V manipulator using the teach pendant

and ATS by using its native programming language, ACL. They also learn how to communicate with the external devices using simple inputs and outputs of the SCORBOT - ER V controller. Please refer to Appendix “B” (Introduction to the SCORBOT - ER V) and Appendix “C” (I/O Communication with the SCORBOT - ER V) to see the details of experimenting with the SCORBOT - ER V.

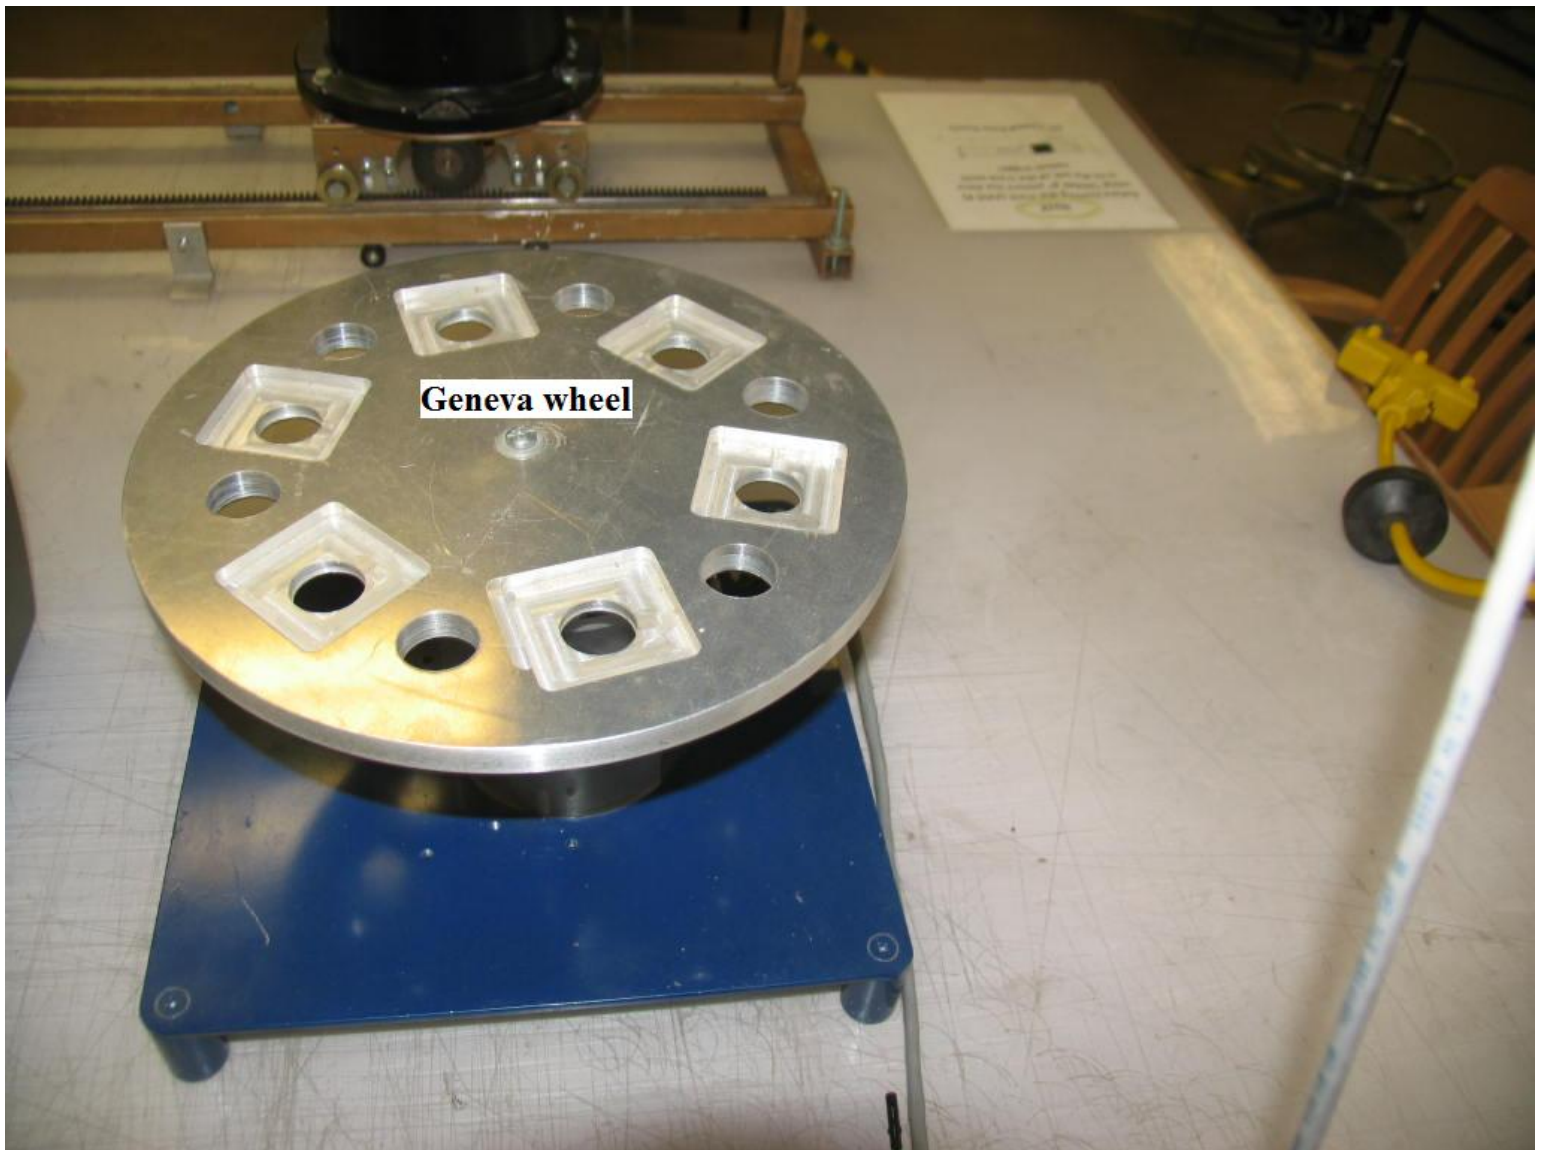


Figure 8: The Geneva wheel



### 3. Hazards and Controls Evaluation

#### *3.1 Possible fire event*

In the event of fire, evacuate the room immediately. Pull the nearest fire alarm (see H-12 A floor plan). Should you return to attempt to extinguish the fire, do not do so alone and make only one attempt to do so. If unsuccessful, leave the lab immediately. If successful stay at the scene and have someone alert the Security and Traffic department (ph. # 4830) and the Environmental Health and Safety office (ph. # 5075). Please refer to H-12 A, Head Hall floor plan to see the locations of fire extinguishers, fire alarm pull station and first aid kit.

#### *3.2 Ventilation*

There are no ventilation exhaust fans for fume hoods. The room is centrally ventilated as fresh air is being introduced at all times into the room. An air ventilation system is not a requirement for the operation of SCORBOT - ER V Plus.

#### *3.3 Kinetic, Thermal and Acoustic*

**The SCORBOT - ER V is associated with very real kinetic hazards. The arm and its joint movement can be very rapid (in fact faster than any human reflex reaction), so no person or object should be within the robot's workspace while it is operational.** The immediate area surrounding this workspace should be delineated with **yellow and black striped safety matting** to define the Physical Hazard danger zone. When possible, the user should also reduce the speed of robot movement by way of the teach pendant or ATS. The operator must stay on the alert at all times and be prepared to press the "EMERGENCY" button while the robot is operational. If the robot is set at a very high speed, then the impulse on robot (due to high acceleration at the start of motion) will cause the teach pendant to deactivate automatically for user safety. Please refer to Appendix "D" (SCORBOT - ER V overview) to see how to adjust the speed of SCORBOT by using teaching pendant. Refer to Appendix "E" (ATS Terminal command reference) to see the command to change the speed of robot. There are several exposed gears and drive belts on this apparatus. Do not wear jewelry, loose clothing or long hair around this equipment.

The robot and its components are not associated with elevated temperatures so it does not pose thermal threat to the user.

The apparatus is not associated with any acoustic hazard.

### ***3.4 Electrical***

The SCORBOT - ER V Plus is electrically powered although it does not pose any electrical threat to the user, if handled carefully. The computer and controller are connected to the main power supply as shown in Figure 9. Always check the apparatus for bare, frayed or cut electrical cables before operating it. Please see Figure 9 to see the main electrical outlet powering this apparatus.

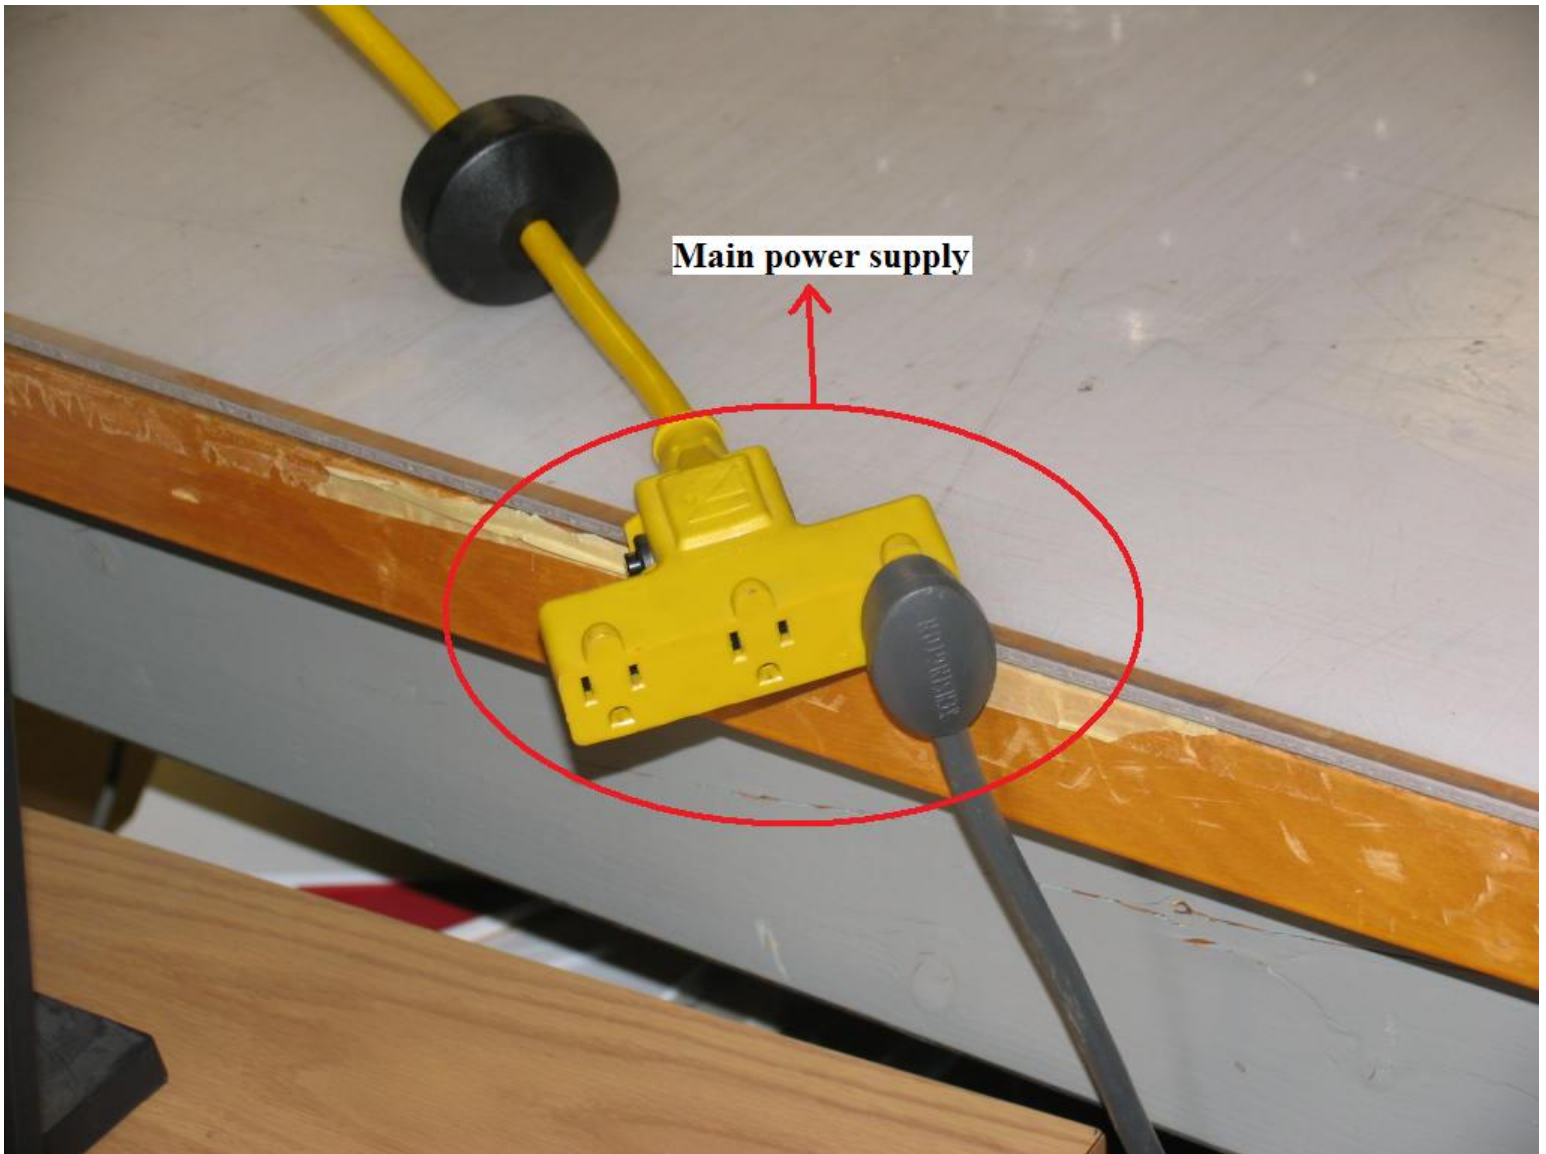


Figure 9: Main power supply to controller and computer

### ***3.5 General, physical and equipment concerns***

Always return both the arm and the linear track to “HOME” after powering ON the controller or pressing the EMERGENCY button. To “HOME” the robot, you must key in “Run 0 [ENTER]”. Please refer to Appendix “D” (SCORBOT - ER V overview, figure D.1) to see the Homing position of the robot.

Never define a position that can cause the arm to collide with itself or damage its joints. If it appears that the arm is about to collide with

something then do not hesitate to press the EMERGENCY or MOTORS button.

Start the operation with low speed and never operate the SCORBOT under influence of drugs or alcohol. Remember that the robot can be programmed to react faster than any possible human reflect reaction.

### ***3.6 Access***

All personnel in the H - 12 A lab should be preauthorized by the faculty supervisor or under the supervision of authorized personnel (lab technician or teacher assistant). No person, other than the faculty supervisor or specifically authorized personnel, is permitted to make alterations to, or to experiment with the SCORBOT - ER V Plus.

### ***3.7 Training***

All individuals using the SCORBOT - ER V Plus shall be required to receive training in the proper operation and maintenance of the apparatus and its controls. Training will include such topics as the complete operation and control of the SCORBOT - ER V Plus. Training programs shall be administered only by qualified personnel at UNB.

### ***3.8 Personal Protective Equipment***

**No open toed shoes** are permitted while using SCORBOT - ER V plus. Impact resistant eyewear is optional but preferable around any moving parts.

## **4. Operation**

### ***4.1 Qualified Personnel***

These notes in the operation section will provide a guideline to the individual that has been trained by qualified personnel to operate the SCORBOT - ER V Plus. Only after the individual has been trained and feels confident with the robot operating procedure should he or she attempt to operate the SCORBOT - ER V using these notes. Do not proceed if you are not properly trained or are unsure in any manner of the safe operation and safety concerns of this equipment.

## ***4.2 Experiment preparation***

Following steps should be carried out to prepare for the experiment:

1. Ensure that the test bench surface is clean.
2. Ensure that the SCORBOT - ER V Plus connection to main power supply is secure and tight (see Figure 9).
3. Verify that all proper connections are made with the controller, PC and teach pendant.
4. Log on to the personal computer that is connected to SCORBOT controller and Geneva wheel/indexing table.



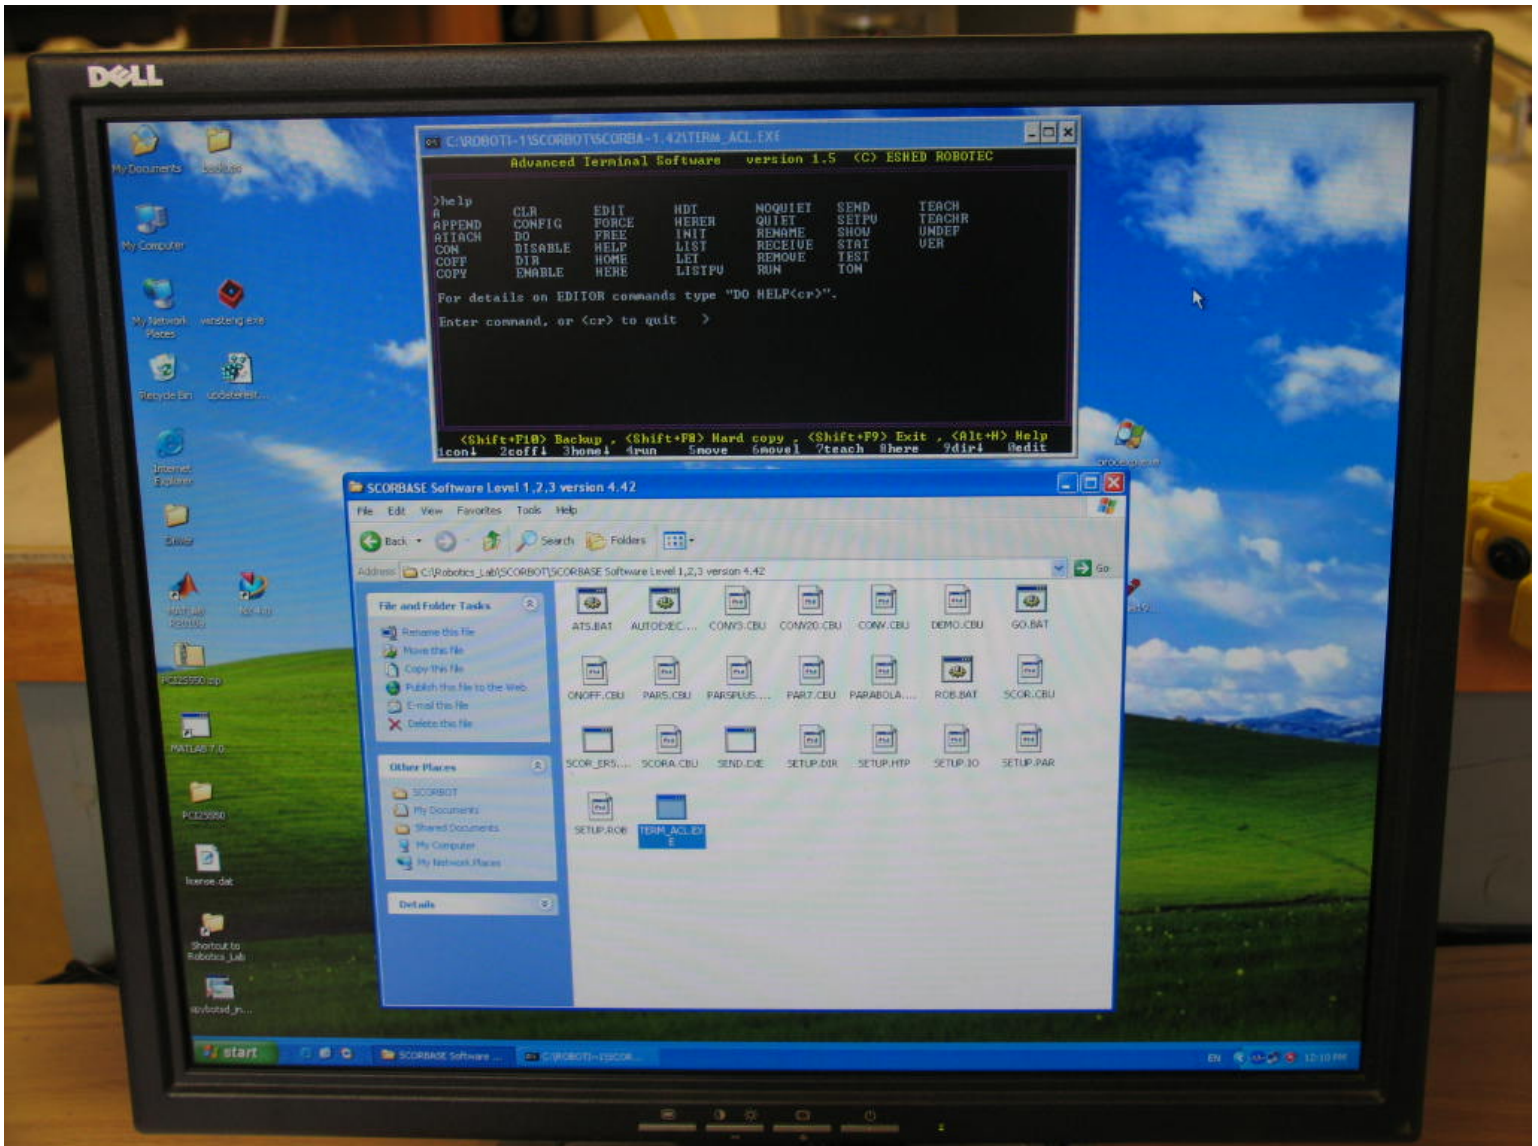


Figure 10: SCORBASE software window displaying ATS HELP on command screen

5. Place the wooden blocks on the slots of indexing table/Geneva wheel

### ***4.3 Lab Instructions***

#### ***4.3.1 Instructor Responsibilities***

The SOP for the SCORBOT - ER V Plus should be read and well understood. This document provides all the necessary information regarding the apparatus operation, hazards involved & safety precautions to be taken while using the apparatus. The lab instructor shall remain in the room while the experiment is in progress. After the students have fully assembled and before any explanation has begun, the instructor should relay all safety precautions and hazards as outlined in Section 3. Inform all students that they must contact the instructor if any problems or concerns should arise during the experiment. Make the group aware of the fire extinguishers locations, fire alarm pull station and exit. Any student from the group missing his personal protective equipment should not be allowed by the instructor to enter the laboratory H - 12 A and proceed with the experiment.

### ***4.4 Operating Procedure***

#### ***4.4.1 Operation of SCORBOT - ER V***

After preparing for the experiment as mentioned in Section 4.2, follow these steps to operate and perform the experiment with the robot:

1. Turn the controller power ON (see Figure 11). This will illuminate the yellow pilot light indicating that the SCORBOT is powered ON.

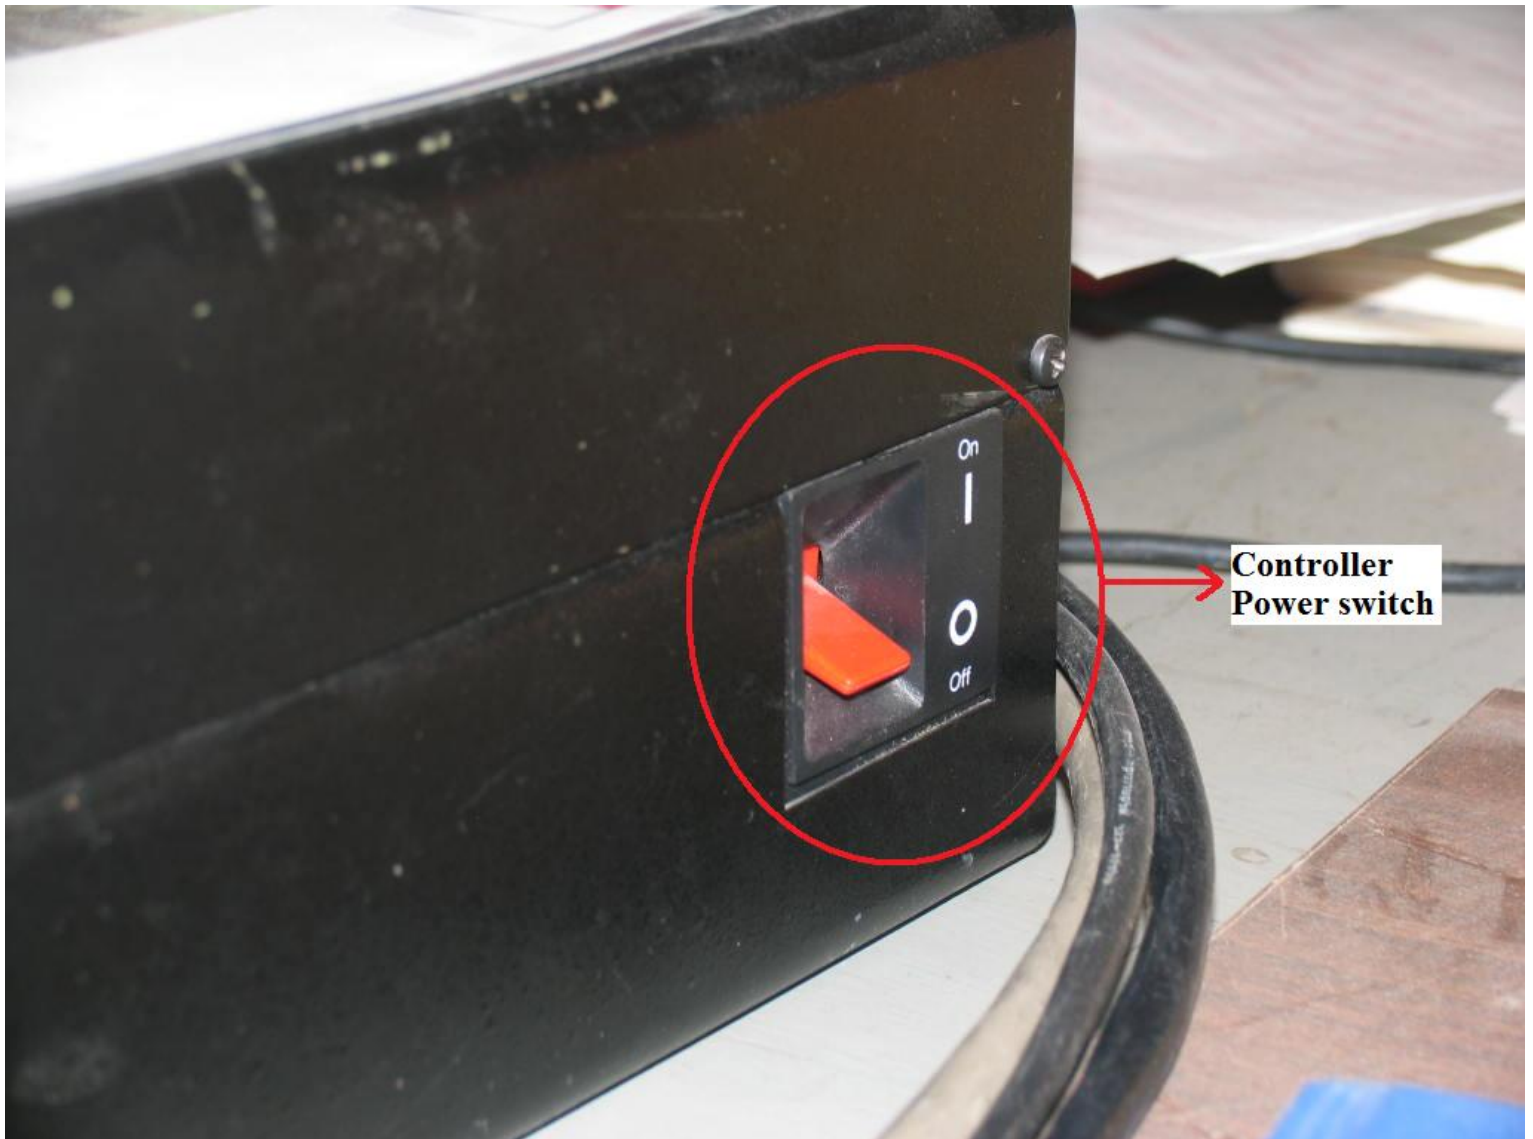


Figure 11: Controller Power ON/OFF switch

2. The Red emergency pilot light should be OFF. If it is not then turn off emergency switch.
3. Turn the controller Motors switch to ON. This will illuminate the Green pilot light indicating that all the motors of robot are powered up.
4. Press the “Control ON/OFF” button on teach pendant (see Figure 4) to turn ON the communication channel between user/teach pendant and SCORBOT. Alternatively, use the computer (SCORBASE program)

to communicate with the robot. Please refer to Figure 10 to see the command screen.

5. “Home” the robot. To home you must key in “Run 0 [Enter]”.
6. To move each joint of the robot independently in either direction, put the robot in “JOINT” mode and key in:
  - a) Base
  - b) Shoulder
  - c) Elbow
  - d) Pitch
  - e) Roll
7. To move the robot in the XYZ Cartesian coordinate plane, put the robot in XYZ mode and key in:
  - a) X+ and X-
  - b) Y+ and Y-
  - c) Z+ and Z-
  - d) Pitch
  - e) Roll
8. To vary the speed of robot movement, key in: Speed <#> [Enter], where  $1 \leq \# \leq 100$ . Note that the default speed is = 50 %
9. To record any position of robot, ensure that the group select mode is A and key in: Record position 11 [Enter].
10. To attain the recorded position of robot, key in: Go position 11.
11. Key in: Open/close gripper to open or close the jaws of the gripper.

#### ***4.4.2 Writing and Running Computer Program***

Please refer to Appendix “D” (SCORBOT - ER V Plus overview, writing and running programs) to see how to write and run a program using SCORBASE software, to operate the robot by SCORBASE software and monitor the movements of the robot. Please see Figure 10 to see the HELP command window of ATS. Please also refer to Figure D.4 (SCORBASE

main screen) and figure D.5 (Edit program screen) in Appendix “D” to see the description of the software.

### ***4.4.3 Shutdown***

#### ***Normal Shutdown***

Perform the following sequence to shutdown the apparatus:

1. Key in: “Run 0 [Enter]” to Home the robot.
2. Press control ON/OFF to disable the teach pendant and its communication with the robot.
3. Turn OFF the motors by pressing the Motors Switch. The Green light will turn OFF indicating no power supply to the motors.
4. Turn OFF the controller power (See figure 11). The Yellow light will turn OFF indicating no power supply to the controller.

#### ***Emergency Shutdown***

In case of emergency, press the Emergency Switch on controller to turn OFF the power supply to all the motors and to the robot.

### ***5.0 Inspection and Maintenance***

The following inspections will be performed before operating the robot:

1. Before powering ON the robot, check the following:
  - The installation meets all safety standards.
  - The robot is properly bolted to the work surface.
  - All cables are properly and securely connected.
  - The teach pendant and any peripheral devices which will be used are properly connected to the controller.
  - No person or object is within the physical hazard zone workspace of robot.



2. After powering ON the apparatus, check the following:

- The power and motor pilot lights illuminated.
- The fan in front of the front panel rotates and draws air into the controller.
- The fan in the rear panel of the controller extracts air from the controller.
- All green pilot lights on the rear of the controller panel illuminate.
- No unusual noises are heard.
- No unusual vibrations are observed.
- There are no obstacles in the robots workspace.

3. Activate the robots Homing procedure and check the following:

- Robot movement is normal.
- No unusual noise is heard or vibration is observed.
- Robot reaches Home position in every axis.

### ***5.1 Periodic & Operational Inspections***

Visual inspections are the responsibility of the person who is conducting experiment on a regular basis with the SCORBOT - ER V Plus and should be carried out every time before operating the apparatus. A complete periodic inspection of the apparatus shall be performed by the person who is conducting experiments on a regular basis with this apparatus. That same person will alert the faculty supervisor of any deficiencies in the apparatus. The deficiencies such as those listed below shall be examined during both the periodic & operational inspection. The faculty supervisor will determine if the deficiencies will affect the safe operation of the apparatus. Please check for the following:

- a. Worn or damaged leads, cables and rubber components.
- b. Worn or loose bolts and screws in the robot arm
- c. Worn, damaged or loose robot arm belts. Upon pressing the belt, the slack should not be greater than 2 mm in tension (see Figure 12).

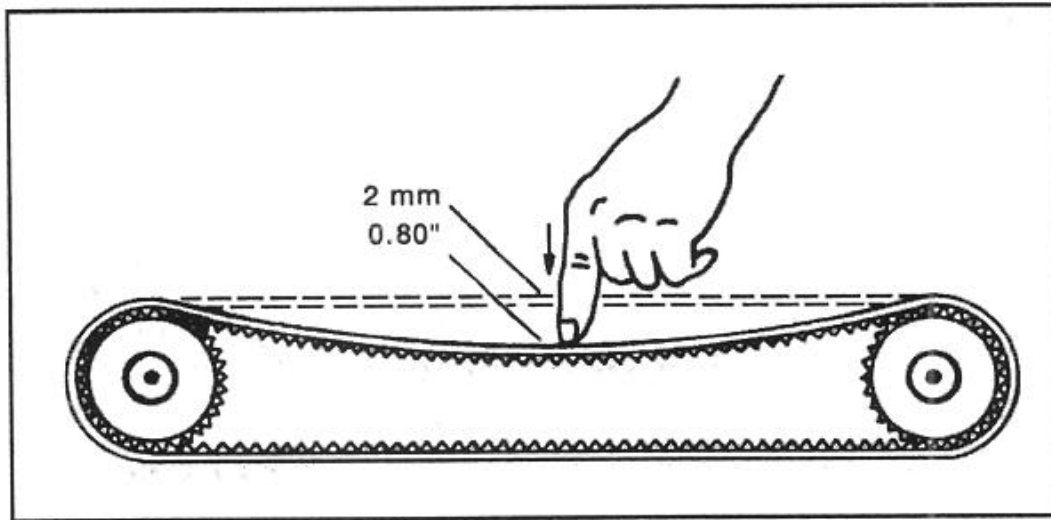


Figure 12: Belt tension

- d. Excessive backlash in the base axis

### ***6.0 Typical Tests***

The actual test procedure will be outlined in the lab script as issued by the professor. A typical test includes writing a program to communicate with the robot to perform a task assigned by the user. Please refer to Appendix “B” (Introduction to the SCORBOT - ER V) and Appendix “C” (I/O Communication with the SCORBOT - ER V) to see the details of experiment with SCORBOT - ER V robot.

# Appendix ‘A’

# Appendix ‘B’

# **Appendix ‘C’**



# Appendix ‘D’

# Appendix ‘E’